



SINCE 1993



PA938 User Manual

Computer Multimedia Speaker



 
SHENZHEN FENDA TECHNOLOGY CO.,LTD.GUANGDONG,PRC
ADD: Fensheng Park, Zhongshan Road, Shijian, Baoan, Shenzhen, Guangdong, PRC
Tel: +86-755-27524668 (800 line) Fax: +86-755-2753777 P.C.: 518108

 
Caution

- Do not place the system in the high-temp and humid environment, prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional guidance.
- In case fragments or other liquids are accidentally sprinkled inside the cabinet, please switch off the power immediately.
- In case of repair, please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.


Packaging content

① Speaker	1unit
② 3.5mm to 3.5mm stereo signal cable	1pc
③ Power cable	1pc
④ Operation manual	1pc
⑤ Wireless Microphone	1pc(optional)
⑥ Remote control	1pc
⑦ Batteries:	4 numbers
AA batteries for Micphone	2 pcs(optional)
AAA batteries for remote control	2 pcs


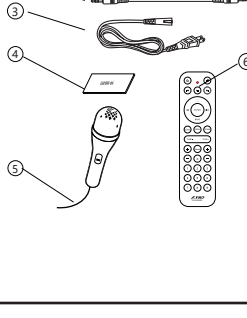




Product wiring diagram

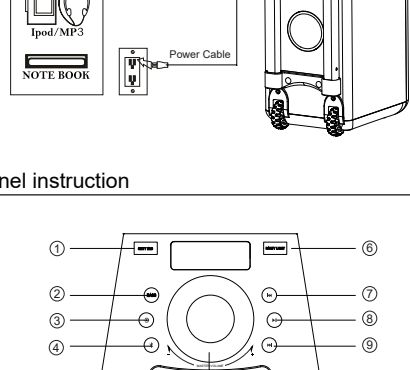

Panel instruction

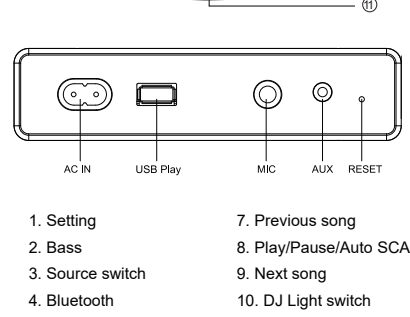 

1. Setting	7. Previous song
2. Bass	8. Play/Pause/Auto SCAN
3. Source switch	9. Next song
4. Bluetooth	10. DJ Light switch
5. Power ON/OFF	11. Volume knob
6. Party light switch	

Panel instruction

A. Power ON/OFF: Long press to turn ON/OFF the unit

B. Bluetooth: Short press of this key will enter in to Bluetooth mode, Short press will enter into pairing mode & display will start flashing fast.

C. Volume knob: Rotate it to decrease or increase the volume level

D. Source: Short press it to switch BT/AUX/USB and FM mode.

E. Play/Pause/SCAN: a. USB Mode and Bluetooth: Short press to play/pause the music. b. FM Mode: Short press to save searched frequencies in fine tuning & manual tuning and long press to auto search.

F. Previous song: a. USB mode: Short press to select previous song and long press to select previous folder. b. FM mode: Long press to select previous stored station.

c. Bluetooth mode: Short press to select previous song

G. Next song: a. USB mode: Short press to select next song and long press to select next folder. b. FM mode: Long press to select next stored station. Short press to manual tuning c. Bluetooth mode: short press to select next song.


H. Setting: a. Short press to select ECHO or Mic mode, then rotate the volume knob to adjust the level. b. FM mode: Press the setting key followed by Volume knob for fine tuning.

I. Party light: Short press to turn ON/OFF the party light.

J. DJ light: Short press to select party light mode and turn off the light and long press to turn off the light.

K. BASS: Short press to turn on/off the Bass Boost mode

Remote control

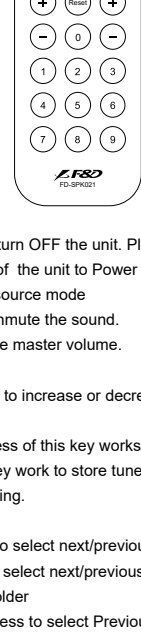

Remote control keys function

A. Power key: Short press to turn OFF the unit. Please Long press Standby button on the top of the unit to Power ON the unit.

B. Source: Press it to switch source mode

C. Mute: press it to mute or unmute the sound.

D. +/-: increase or decrease master volume.

E. Tune +/-: a. Fine Tuning: Short press to increase or decrease one step (100KHz). b. Manual Tuning: Long press of this key works for Manual tuning.

F. MEM: Short press of this key work to store tuned station through Fine or Manual tuning.

G. : a. USB mode: short press to select next/previous folder. b. FM mode: short press to select next/previous songs & long press to select next/previous folder c. Bluetooth mode: short press to select Previous/next song

H. Scan: FM mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.

I. Enter: confirm selection and return to main screen.

Remote control

J. 0-9 number keys: a. USB mode: directly press numeric keys through remote to select your favorite song if you know the song number in the folder. The system will automatically play the last song of the folder if you press number excess of song number of that folder. b. FM mode: directly press numeric keys through remote to select your favorite station if you know the station number (1-100). Or press 3 or 4 digits of frequency to play that station, for example, 102.6 for 102.6 MHz station.

K. Play/Pause: a. USB mode, short press to play or pause. b. Bluetooth mode: Short press to play or pause mode and Long press entering pairing mode, the display will flash fast.

L. Light: Short press to select party light mode flash and turn off the light.

M. ECHO +/-: Short press to adjust the ECHO level

N. Mic Volume +/-: Short press to adjust the Mic volume level

O. BASS: Short press to turn on/off the Bass Boost mode

P. Reset: short press to go to default settings

Specifications

Computer Multimedia Speaker

Output Power (RMS): 40W X 2

Frequency response: 40Hz - 20KHz

Speaker Unit:

Subwoofer: 5.25" X 2pcs Tweeter: 2" X 2pcs

Separation: >45dB/S/N Ratio: >20dB

Battery capacity: 12V 7Ah

Power: 100-240V-50/60Hz 1A

Unit size: W262XD281XH548mm

Net Weight: 11kg

Operation guidance

Playback via Bluetooth

Basic Requirement

- Bluetooth must be activated on the mobile end device which you want to connect with Fenda PA938
- The mobile end device must support Bluetooth A2DP
- The mobile end device must be within range of the Fenda PA938(max. 10m)

Steps need to be followed

- Select input
- Long press
- will appears on the display
- You now have 30 seconds to register your mobile end device
- Start the search on your mobile end device
- If the mobile device requires an access code, please enter 0000
- Once confirmed, the connection will be done automatically and will appear in the display

Please note:

1. The device most recently connected to the F&D System connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected. In this case the message will appear.

2. Start the playback of a medium on your mobile end device and the sound will automatically be generated by the F&D System.

USB mode

- Plug in USB driver
- Card reader supporting max 32GB as well as MP3/WMA dual formats decoding
- Play music (refer to remote control function)



Troubleshooting

Problem	Possible Cause	Solution
F&D system does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction too soft	Volume of F&D System set too low	Increase the volume using the "Volume" button. Increase the volume of the source device
F&D System does not respond to remote control.	The battery is empty	Replace battery, observe correct polarity at insertion
No sound reproduction	Source device not producing any signal.	Digital output on the source device not activated (please refer to device instructions).
	Cable not correctly connected/faulty cable.	Check the connection of the source device to the F&D System and change the cable if necessary.
	distance is far from device in Bluetooth mode	put your Bluetooth device close to the speaker
	Bluetooth device not connected successfully	please restart the speaker and try again

APP control:

Fenda PA938 support APP control, you can search "Fenda" to download the application in IOS store and Google play. Or can be downloaded directly by scanning the QR code given below



QR code for IOS



QR code for Android

Safety Instruction for CB and CE-LVD

- Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
-  Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
- Frequency: 2.402GHz-2.48GHz
 - The Max. transmit power: 10 dBm

WARRANTY CARD

END-USER'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____

Last Name: _____

Address: _____

Contact No.: _____

Product Name: _____

Model No.: _____

Serial No.: _____

Date Purchased: _____

Invoice No.: _____

Retall Outlet Where Purchased: _____

(Please print the name & address)

SECTION 1

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - Parts: 1 year
 - Technical service free: 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - Failure to present the warranty card and receipt when servicing is required.Full particulars not clearly shown or alterations made against the actual information.
 - For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
 - This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.
Add: Fenda Hi-Tech Park, Zhoushi Road, Shijian, Baoan, Shenzhen, China
P.C.: 518108 HTTP://www.fenda.com

WARRANTY CARD

DISTRIBUTOR'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____

Last Name: _____

Address: _____

Contact No.: _____

Product Name: _____

Model No.: _____

Serial No.: _____

Date Purchased: _____

Invoice No.: _____

Retall Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - Parts: 1 year
 - Technical service free: 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - Failure to present the warranty card and receipt when servicing is required.Full particulars not clearly shown or alterations made against the actual information.
 - For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
 - This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.
Add: Fenda Hi-Tech Park, Zhoushi Road, Shijian, Baoan, Shenzhen, China
P.C.: 518108 HTTP://www.fenda.com

WARRANTY CARD

DISTRIBUTOR'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____

Last Name: _____

Address: _____

Contact No.: _____

Product Name: _____

Model No.: _____

Serial No.: _____

Date Purchased: _____

Invoice No.: _____

Retall Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2