



T-400U *User Manual*

2.1 Computer Multimedia Speaker

Warnings:

Do not place the system in the high-temp and humidity environment, prevent it from raining or rough handling and strong shock.

In order to avoid electric shock and other accidents, do not open the right side panel cover for repair without any professional guidance.

In case fragments or other liquids are accidentally sprinkled inside the cabinet, please switch off the power immediately. In case of repair, please come to the professional maintenance for help.

Switch off the power and take off the plug from the power jack when the system is not on work.

Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.

Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.

Do not keep it close to the fire.

Package contents

1. Wooden cabinet for sub-woofer	1pc
2. Satellite speakers	2pcs
3. Signal input cable	
a) 3.5 mm to RCA stereo cable	1pc
b) RCA to RCA stereo cable (optional)	1pc
4. Operation manual	1pc
5. Full function remote	1pc
6. Connection Cable	2pcs

Specification

Output power (RMS):

Satellites: 20Wx2(THD+N=10%,1KHz)

Subwoofer: 60W(THD+N=10%,40Hz)

Speaker unit:

Subwoofer: 8"6Ω

Satellites: 3"4Ω

Frequency Response:


Satellites: 300Hz-20KHz

Subwoofer: 20Hz-120Hz

Separation: ≥35dB

S/N Ratio: ≥65dB


Power: 220-240V ~50/60Hz 0.4A

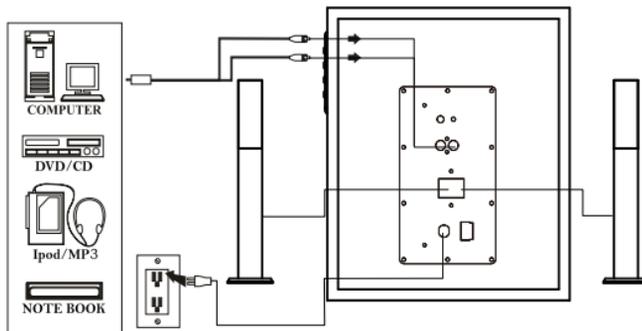


1. Standby and volume indicator
2. AUX indicator
3. USB/SD indicator
4. FM indicator
5. IR window

① ② ③ ④ ⑤

Panel instruction

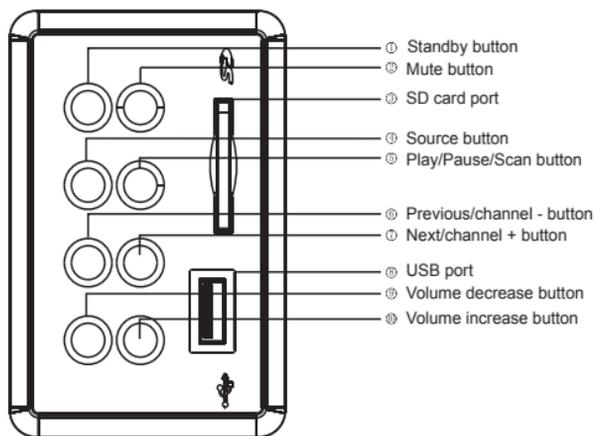

Instruction of rear board

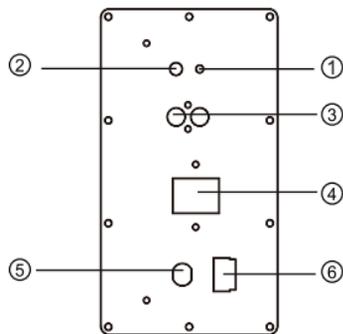


1. FM Ant.
2. 3.5MM Jack
3. RCA Jack
4. Audio output
5. Power cable
6. Power switch

Panel key controls

- A. Standby: Turn on/off unit
B. Mute: press it to mute or unmute the sound
C. ◀ ▶: Decrease or Increase the volume level
D. Source: switch betweenAUX, USB/SD and FM. LED on subwoofer panel will be bright to indicate related source mode.
E. ◀/CH- :USB/SD Mode: Short press to select previous song and long press to select previous folder. FM source: Short press to select previous stored station, FM LED flash once. When it reaches to 1st stored station/channel, short press of this key does not change the channel & LED remains bright.
F. ▶/SCAN: USB/SD Mode: Short press for play/pause the music playback. FM Mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.
G. ▶/CH+: USB/SD mode: Short press to select next song and long press to select next folder. FM Mode: Short press to select next stored station, FM LED flash once. When it reaches to last stored station/channel, short press of this key does not change the channel & LED remains bright.

Remote control keys function

- A. Standby: turn on/off unit
- B. Source: switch between AUX, USB/SD and FM
- C. Mute: press it to mute or unmute the sound
- D. TRE+: increase treble level
- E. TRE-: decrease treble level
- F. BASS+: increase bass level
- G. BASS-: decrease bass level
- H. Vol+/-: increase or decrease master volume
- J. Tune+/-: fine tune under FM source
1. Short press to increase or decrease one step;
 2. Press and hold about 1 second and then release, start auto scan for a station.
After searching a station, the unit plays that station.
- K. MEM: After using Tune+/- to search a station, press MEM to store that station
- L. CH+/-: select stored station
- M. Reset: short press to go to default settings
- N. Scan: FM source, short press to start searching FM stations automatically and FM stations will be stored automatically
- O. Enter: confirm setting and return to main screen
- R. 0~9 number keys:
1. USB/SD source: directly press numeric keys through remote to select your favorite song if you know the song number in the folder. The system will automatically play the last song of the folder if you press number excess of song number of that folder.
 2. FM source: directly press numeric keys through remote to select your favorite station if you know the station number (1~100). Or press 3 or 4 digits of frequency to play that station, for example, 1026 for 102.6 MHz station.
- S. Play/Pause: USB/SD source, short press to play or pause
- T. Prev: USB/SD source, short press to select previous song
- U. Next: USB/SD source, short press to select next song
- V. Folder+/-: USB/SD source, short press to select next/previous folder

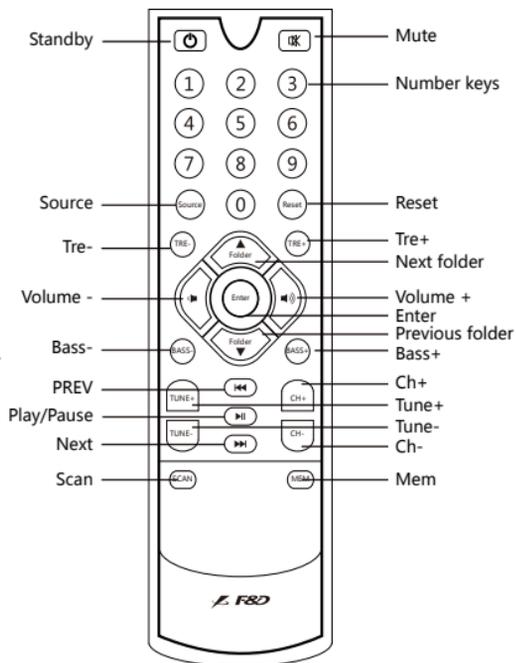



SHENZHEN FENDA TECHNOLOGY CO.,LTD,GUANGDONG,PRC
ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, Guangdong, PRC
Tel: +86-755-27486668 (800 line) Fax: +86-755- 27353777 P.C.: 518108