



SHENZHEN FENDA TECHNOLOGY CO.,LTD, GUANGDONG, PRC
 ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, Guangdong, PRC
 Tel: +86-755-27486668 (800 line) Fax: +86-755-27353777 P.C.: 518108

F&D
 www.fenda.com



T-80U User Manual

Computer multimedia speaker



1

CAUTION

- Do not place the system in the high-temp and humidity environment, prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the right side panel cover for repair without professional guidance.
- In case fragments or other liquids is accidentally sprinkled inside the cabinet, please switch off the power immediately. In case of repair, please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work
- Keep in safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.

FEATURES

- USB/SD connectivity gives you freedom from any other source

- Adaptable to any equipments with audio system such as PC, VCD, CD, LD & TV etc.

POWER SUPPLY:

- 220V-240V~50Hz/60Hz


SYSTEM COMPOSITION:

Speakers	2pcs	Remote control	1pc
Operation manual	1pc	RCA to RCA stereo cable	1pc
Warranty card	1pc	3.5mm to RCA stereo cable	1pc(optional)
		Speaker wire	1pc




2

Touch sense buttons function

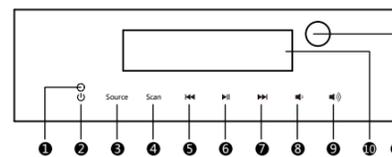

- 1 Power indicator
- 2 Standby
- 3 Source
- 4 Scan
- 5 Previous/CH-
- 6 Play/Pause
- 7 Next/CH+
- 8 Volume -
- 9 Volume +
- 10 LCD Display
- 11 IR

Remote control keys function

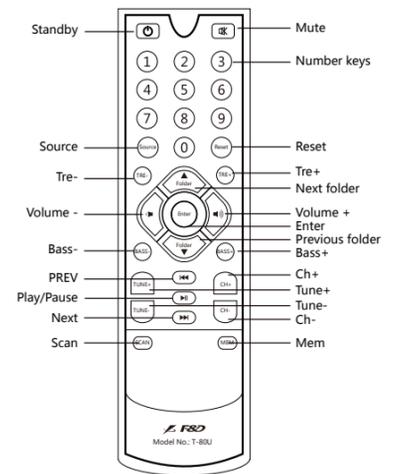

3

Operation Manual

1. Touch sense buttons function

- A. Standby: turn on/off unit
- B. Volume +/-: decrease or increase volume
- C. Source: switch between AUX1, AUX2, USB/SD and FM. LCD display will indicate related source
- D. Previous/CH-: USB/SD source, short press to select previous song and long press to select previous folder; FM source, short press to select previous stored station
- E. Play/Pause: USB/SD source, short press for play/pause music
- F. Next/CH+: USB/SD source, short press to select next song and long press to select next folder; FM source, short press to select next stored station
- G. Scan: FM source, short press to start searching FM stations automatically and FM stations will be stored automatically (total up to 99).

2. Side panel controls function

- A. MIC volume: adjust microphone volume
- B. MIC echo: adjust microphone echo effect

3. Remote control keys function

- A. Standby: turn on/off unit
- B. Source: switch between AUX1, AUX2, USB/SD and FM
- C. Mute: press it to mute or unmute the sound



4

- D. TRE+: increase treble (-3 to +3)
- E. TRE-: decrease treble (-3 to +3)
- F. BASS+: increase bass (-3 to +3)
- G. BASS-: decrease bass (-3 to +3)
- H. Vol +/-: increase or decrease master volume, range from 0 to 60
- J. Tune +/-: fine tune under FM source
 - 1. Short press to increase or decrease one step;
 - 2. Press and hold about 1 second and then release, start auto scan for a station. After searching a station, the unit plays that station.
- K. MEM: After using Tune +/- to search a station, press MEM to store that station
- L. CH +/-: select stored station
- M. Reset: short press to go to default settings
- N. Scan: FM source, short press to start searching FM stations automatically and FM stations will be stored automatically
- O. Enter: confirm setting and return to main screen
- R. 0~9 number keys:
 - 1. USB/SD source: directly press numeric keys through remote to select your favorite song if you know the song number in the folder.



5

- The system will automatically play the last song of the folder if you press number excess of song number of that folder.
- 2. FM source: directly press numeric keys through remote to select your favorite station if you know the station number (1~100). Or press 3 or 4 digits of frequency to play that station, for example, 1026 for 102.6 MHz station.
- S. Play/Pause: USB/SD source, short press to play or pause
- T. Prev: USB/SD source, short press to select previous song
- U. Next: USB/SD source, short press to select next song
- V. Folder +/-: USB/SD source, short press to select next/previous folder



6

Specifications

Output Power: 60W X 2 (RMS)
 Speaker Unit:
 Tweeter: 1"
 Full-range speaker: 4"
 Subwoofer: 6.5"
 Frequency response: 40Hz-20KHz
 Power supply: 220V-240V AC 50/60Hz 0.65A
 S/N Ratio: ≥ 75dB
 Separation: ≥ 50dB
 Dimension:
 Satellite: W160 X D250 X H780mm
 Sub-woofer: W160 X D250 X H780mm
 Net Weight: 17.9kg