



T2 User Manual

Computer Multimedia Speaker


SHENZHEN FENDA TECHNOLOGY CO.,LTD.GUANGDONG,PRC
ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyao, Baoan, Shenzhen, Guangdong, PRC
Tel: +86-755-27486668 (800 line) Fax: +86-755- 27537777 P.C.: 518108

Caution



- Do not place the system in the high-temp and humid environment, prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional guidance.
- In case fragments or other liquids is accidentally sprinkled inside the cabinet, please switch off the power immediately.
- In case of repair, please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.

Packaging content


- Speaker 1set
- Power cable 1pc
- Signal Cable 1pc
- Remote control 1pc
- Operation manual 1pc
- Microphone 1pc

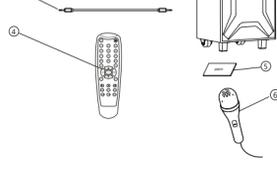

Product wiring diagram

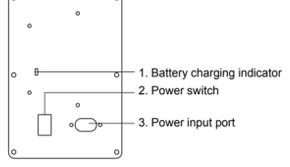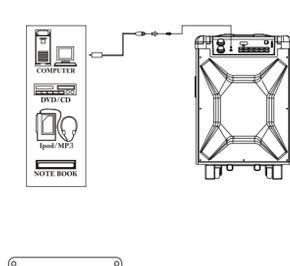

Panel instruction

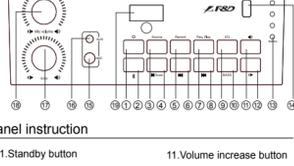

Panel instruction

- Standby button
- Bluetooth button
- Source button
- Play/Pause/FM autoscans button
- Record button
- Previous/CH- button
- Rec.Play button
- Next/CH+ button
- EQ select button
- BASS button
- Volume increase button
- Volume decrease button
- Battery level indicator
- USB port
- Microphone Input Jack
- AUX IN port
- Echo control knob
- Microphone volume knob
- Display

- A. : Turn on/off unit
 B. : Short press of this key will enter in to Bluetooth mode, Long press will enter into pairing mode & display will start flashing fast.
 C. : Decrease or increase the volume level
 D. Source: Switch among BT/AUX/USB and FM mode.
 E. /SCAN: a. USB Mode: Short press for play/pause the music play back. b. FM Mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically. c. Bluetooth mode: short press to play/pause music.
 F. /CH-: a. USB mode: Short press to select previous song and long press to select previous folder. b. FM mode: Short press to select previous stored station. c. Bluetooth mode: short press to select previous song.

Remote control

- G. : a. USB mode: Short press to select next song and long press to select next folder. b. FM mode: Short press to select next stored station. c. Bluetooth mode: short press to select next song.
 H. Record: under USB mode, plug-in USB device and microphone, short press it to start recording. Short press again to stop recording.
 I. Rec.Play: short press to play recorded voice files.
 J. EQ button: short press to select "POP/Jazz/Rock/Bass/Normal" sound effectiveness
 K. Bass button: short press to on/off bass enhancement
- Remote control keys function**
- A. : turn on/off unit.
 B. : AUX, USB and FM .Press it to select desired source mode.
 C. : press it to mute or unmute the sound.
 D. : increase or decrease master volume.
 E. Tune +/-: FM mode:
 Fine Tuning: Short press to increase or decrease one step (100KHz), Manual Tuning: Long press of this key works for Manual tuning.
 F. MEM: Short press of this key work to store tuned station through Fine or Manual tuning.
 G. CH +/- :
 FM mode: select stored station.
 H. Scan: FM mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.
 I. Enter: confirm selection and return to main screen.
 J. 0-9 number keys:
 1. USB source: directly press numeric keys through remote to select your favorite song if you know the song number in the folder. The system will automatically play the last song of the folder if you press number excess of song number of that folder.

Remote control

2. FM source: directly press numeric keys through remote to select your favorite station if you know the station number (1-100). Or press 3 or 4 digits of frequency to play that station, for example, 102.6 for 102.6 MHz station.
 K. : USB and BT source, short press to play or pause.
 L. : USB and BT source, short press to select previous song.
 M. : USB and BT source, short press to select next song.
 N. Folder / : USB source, short press to select next/previous folder.
 O. : short press to Bluetooth mode and Long press entering pairing mode, the display will flash fast.
 P. Reset: short press to go to default settings.
 Q. EQ: short press to select POP/Jazz/Rock/BASS and normal sound



Operation guidance

Playback via Bluetooth

- Basic Requirement**
- Bluetooth must be activated on the mobile end device which you want to connect with Fenda T2
 - The mobile end device must support Bluetooth A2DP
 - The mobile end device must be within range of the Fenda T2 (max.10m)

- Steps need to be followed**
- Select input
 - Long press the
 - will appears on the display
 - You now have 30 seconds to register your mobile end device
 - Start the search on your mobile end device
 - If the mobile device requires an access code, please enter 0000

7. Once confirmed, the connection will be done automatically and will appear in the display
- Please note:**
- The device most recently connected to the F&D System connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected. In this case the message will appear.
 - Start the playback of a medium on your mobile end device and the sound will automatically be generated by the F&D System.

USB mode

- Plug in USB driver
- Card reader supporting max 32GB as well as MP3/WMA dual formats decoding
- Play music (refer to remote control function)



Specifications

- Output power (RMS):30W
 Speaker Unit:
 Tweeter: 3"
 Subwoofer: 10"
 Frequency response: 20Hz-20KHz
 S/N Ratio: ≥70dB
 Battery capacity: 12V 5Ah
 Power: 100-240V~50/60Hz 0.6A
 Unit size: W391XD331XH574mm
 Net Weight: 12.6kg

Troubleshooting

Problem	Possible Cause	Solution
F&D system does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction too soft	Volume of F&D System set too low	Increase the volume using the "Volume" button, increase the volume of the source device
F&D System does not respond to remote control.	The battery is empty	Replace battery, observe correct polarity at insertion
No sound reproduction	Source device not producing any signal.	Digital output on the source device not activated (please refer to device instructions).
	Cable not correctly connected/ faulty cable.	Check the connection of the source device to the F&D System and change the cable if necessary.
	distance is far from device in Bluetooth mode	put your Bluetooth device close to the speaker
	Bluetooth device not connected successfully	please restart the speaker and try again

APP control:

Fenda T2 support APP control, you can search "Fenda" to download the application in IOS store and Google play. Or can be downloaded directly by scanning the QR code given below



QR code for IOS



QR code for Android

F&D WARRANTY CARD

END-USER'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
 Last Name: _____
 Address: _____
 Contact No.: _____
 Product Name: _____
 Model No.: _____
 Serial No.: _____
 Date Purchased: _____
 Invoice No.: _____
 Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 1

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - Parts:..... 1 year
 - Technical service free:..... 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - Failure to present the warranty card and receipt when servicing is required.

Full particulars not clearly shown or alterations made against the actual information.
 For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.

 - This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.
 Add: Fenda Hi-Tech Park, Zhoushi Road, Shiyao, Baoan, Shenzhen, China
 P.C.: 518108 HTTP://www.fenda.com

F&D WARRANTY CARD

DISTRIBUTOR'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
 Last Name: _____
 Address: _____
 Contact No.: _____
 Product Name: _____
 Model No.: _____
 Serial No.: _____
 Date Purchased: _____
 Invoice No.: _____
 Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - Parts:..... 1 year
 - Technical service free:..... 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - Failure to present the warranty card and receipt when servicing is required.

Full particulars not clearly shown or alterations made against the actual information.
 For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.

 - This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.
 Add: Fenda Hi-Tech Park, Zhoushi Road, Shiyao, Baoan, Shenzhen, China
 P.C.: 518108 HTTP://www.fenda.com

展开尺寸	150X154MM	品牌	F&D	时间	20170503	订单号	YFE17033之后
成型尺寸	75X154MM	版本	A0	公司型号	T2	客户型号	T2
材质要求	105g铜版纸	电子版		设计内容	说明书	料号	17.7.030.1309
印刷要求	单黑正反印刷	设计者	杨改改	结构		PLM文档编号	
工艺要求	无处理	复 核		标准化		项目经理	
页码数(页)	打钉8页			业务		核 准	