


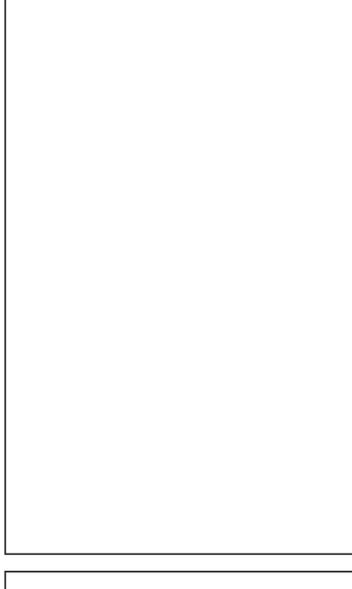

T5 User Manual

Computer Multimedia Speaker





Caution

- Do not place the system in the high-temp and humid environment, prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional guidance.
- In case fragments or other liquids is accidentally sprinkled inside the cabinet, please switch off the power immediately.
- In case of repair, please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not on work.
- Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.

Packaging content

- ① Speaker 1set
- ② Power cable 1pc
- ③ Signal Cable 1pc
- ④ Remote control 1pc
- ⑤ Operation manual 1pc
- ⑥ Wireless Microphone 1pc

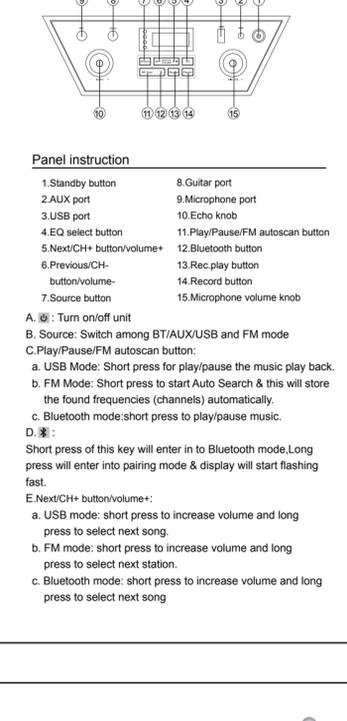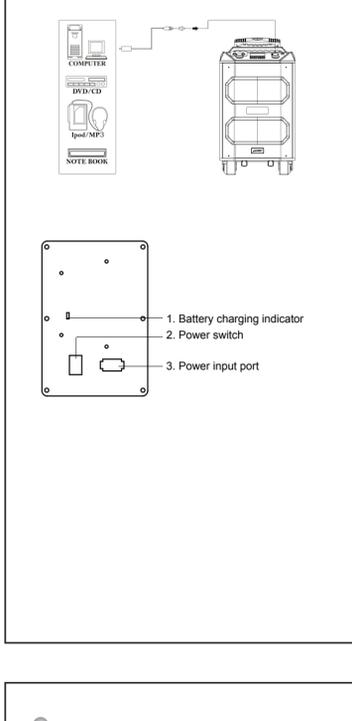

Remote control

F. Previous/CH- button/volume-:
 a. USB Mode: Short press to decrease volume and long press to select previous song.
 b. FM Mode: Short press to decrease volume and long press to select previous station.
 c. Bluetooth mode: Short press to decrease volume and long press to select previous song.
 G. Rec. play button: short press to play recorded voice files.
 H. EQ select button: short press EQ button to display "T", short press volume+ button to adjust treble. Short press EQ button again to display "b", short press volume button to adjust bass.
 I. Record button: under USB mode, plug-in USB carder and microphone, short press it to start recording.
 J. Guitar port: Connect to electric guitar. Guitar input signal can not be controlled by microphone volume knob and echo knob, you can adjust it by electric guitar itself.

Remote control keys function

- A. : turn on/off unit.
- B. : AUX/USB and FM: Press it to select desired source mode.
- C. : press it to mute or unmute the sound.
- D. : increase or decrease master volume.
- E. : FM mode:
 Fine Tuning: Short press to increase or decrease one step (100KHz), Manual Tuning: Long press of this key work for Manual tuning.
 F. : MEM: Short press of this key work to store tuned station through Fine or Manual tuning.
 G. : CH+/ :
 FM mode: select stored station.
 H. : Scan: FM mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.
 I. : Enter: confirm selection and return to main screen.

Remote control

J. 0-9 number keys:
 1. USB source: directly press numeric keys through remote to select your favorite song if you know the song number in the folder. The system will automatically play the last song of the folder if you press number excess song number of that folder.
 2. FM source: directly press numeric keys through remote to select your favorite station if you know the station number (1-100). Or press 3 or 4 digits of frequency to play that station, for example, 102.6 MHz station.

K. : USB and BT source, short press to play or pause.
 L. : USB and BT source, short press to select previous song.
 M. : USB and BT source, short press to select next song.
 N. : USB source, short press to select next/previous folder.
 O. : short press to Bluetooth mode and Long press entering pairing mode, the display will flash fast.
 P. : Short press to reset the current mode & Long press to go to default settings.
 Q. : short press EQ button to display "T", short press volume+ button to adjust treble. Short press EQ button again to display "b", short press volume button to adjust bass.

Operation guidance

Playback via Bluetooth

Basic Requirement

- Bluetooth must be activated on the mobile end device which you want to connect with Fenda T5
- The mobile end device must support Bluetooth A2DP
- The mobile end device must be within range of the Fenda T5 (max. 10m)

Steps need to be followed

- Select input
- Long press the
- will appear on the display
- You will now have 30 seconds to register your mobile end device
- Start the search on your mobile end device
- If the mobile device requires an access code, please enter 0000
- Once confirmed, the connection will be done automatically and will appear in the display

Please note:

- The device most recently connected to the F&D System connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected. In this case the message will appear.
- Start the playback of a medium on your mobile end device and the sound will automatically be generated by the F&D System.

USB mode

- Plug in USB driver
- Card reader supporting max 32GB as well as MP3/WMA dual formats decoding
- Play music (refer to remote control function)

Specifications

Output power (RMS): 33W
 Speaker Unit:
 Tweeter: 3"
 Subwoofer: 10"
 Frequency response: 20Hz-20KHz
 S/N Ratio: ≥70dB
 Battery capacity: 12V 7Ah
 Power: 110-240V-50/60Hz 0.5A
 Unit size: W312XD305XH527mm
 Net Weight: 10.5kg

Troubleshooting

Problem	Possible Cause	Solution
F&D system does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction too soft	Volume of F&D System set too low	Increase the volume using the "Volume" button, increase the volume of the source device
F&D System does not respond to remote control.	The battery is empty	Replace battery, observe correct polarity at insertion
No sound reproduction	Source device not producing any signal.	Digital output on the source device not activated (please refer to device instructions).
	Cable not correctly connected/faulty cable.	Check the connection of the source device to the F&D System and change the cable if necessary.
	distance is far from device in Bluetooth mode	put your Bluetooth device close to the speaker
	Bluetooth device not connected successfully	please restart the speaker and try again

APP control:
 Fenda T5 support APP control, you can search "Fenda" to download the application in IOS store and Google play. Or can be downloaded directly by scanning the QR code given below

QR code for IOS

QR code for Android

F&D WARRANTY CARD

END-USER'S COPY
WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
 Last Name: _____
 Address: _____
 Contact No.: _____
 Product Name: _____
 Model No.: _____
 Serial No.: _____
 Date Purchased: _____
 Invoice No.: _____
 Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 1

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - A. Parts: 1 year
 - B. Technical service free: 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - A. Failure to present the warranty card and receipt when servicing is required.
 Full particulars not clearly shown or alterations made against the actual information.
 For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
 B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 C. The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.
 Add: Fenda Hi-Tech Park, Zhongli Road, Shiyuan, Baoan, Shenzhen, China
 P.C.: 518108 Http://www.fenda.com

F&D WARRANTY CARD

DISTRIBUTOR'S COPY
WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
 Last Name: _____
 Address: _____
 Contact No.: _____
 Product Name: _____
 Model No.: _____
 Serial No.: _____
 Date Purchased: _____
 Invoice No.: _____
 Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - A. Parts: 1 year
 - B. Technical service free: 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - A. Failure to present the warranty card and receipt when servicing is required.
 Full particulars not clearly shown or alterations made against the actual information.
 For e.g.: Alteration of the date of purchase, serial numbers-altered or removed.
 B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 C. The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd.
 Add: Fenda Hi-Tech Park, Zhongli Road, Shiyuan, Baoan, Shenzhen, China
 P.C.: 518108 Http://www.fenda.com

F&D WARRANTY CARD

DISTRIBUTOR'S COPY
WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
 Last Name: _____
 Address: _____
 Contact No.: _____
 Product Name: _____
 Model No.: _____
 Serial No.: _____
 Date Purchased: _____
 Invoice No.: _____
 Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

品牌	F&D	时间	20171202	订单号	FE17428	尺寸/套数	75X154MM(成型) 150X154MM(展开)
版本	A0	设计内容	说明书	客户型号	T5	材质/厚度	105g铜版纸
电子软件	杨改刀	标准	李洪波	料号	17.030.1512	盒型/页码/条码	书钉
设计者	杨改刀	标准	李洪波	项目经理	黄伟	字体要求	按照文件
备注	此物料刀模、印刷颜色同料号:					印刷/表面处理	单黑正反印刷
						工艺/表面处理/版数	无
						公差/用量	正负公差 (1mm)