


BLADE

SINCE 1993
F&D

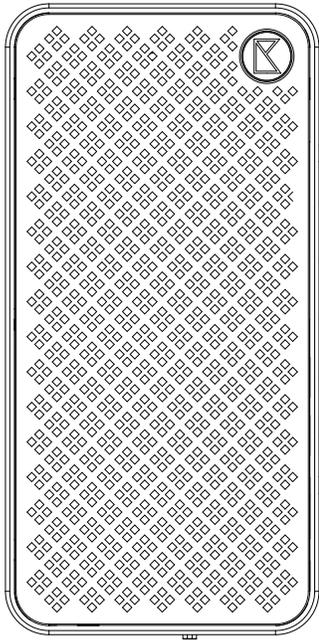

User Manual
W30

CAUTION

1

1. All the safety and operating instructions should be read before the appliance is operated.
2. All operating and user instructions should be followed.
3. The appliance should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, ect. It should not be exposed to dripping or splashing water, and no Objects filled with liquid, such as a vase, should be placed on the appliance.
4. Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
5. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; Or placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings.

PACKAGE CONTENTS


| | |
|-----------------------------|-----|
| ⊙ Speakers | 1pc |
| ⊙ 3.5mm to 3.5 stereo cable | 1pc |
| ⊙ USB cable | 1pc |
| ⊙ Operation manual | 1pc |



SHENZHEN FENDA TECHNOLOGY CO.,LTD.GUANGDONG.PRC
ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyuan, Baoan, Shenzhen, Guangdong, PRC
Tel: +86-755-27486668 (800 line) Fax: +86-755-27353777 P.C.: 518108


BUTTON CONTROLS

 2




1. short press to Bluetooth source, long press entering pairing mode, blue LED will flash fast.
2. short press to switch between Bluetooth, Micro SD and AUX sources.
LED colors: blue for Bluetooth, white for Micro SD, dark for AUX;
3. short press to decrease volume and long press entering previous song, under Bluetooth and Micro SD mode;
4. short press to increase volume and long press entering next song, under Bluetooth and Micro SD mode.;
5. short press to pause/play music;
6. under Bluetooth mode, short press to answer the call and long press to reject the call.

CONNECTION DIAGRAM

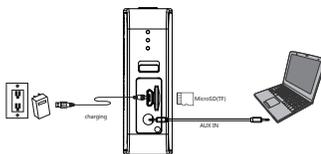

CHARGING

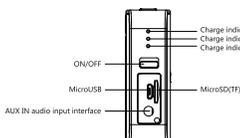

1. Connect mini USB port of unit to computer or charger' s USB port using USB cable included in the package
2. Charging LED bright in cycle during and all bright after finishing charging
3. Recommend to charge the unit once every month and turn off the unit if not use

OPERATION MANUAL

 
3

MicroSD card (TF) mode

1. Insert a MicroSD card (TF).



2. The biggest support 32GB card, MP3 / WMA dual formats music.
3. Play music operation (see keys function).



Bluetooth mode

Turn "on/off" switch at side. After power on, W30 will automatically search the Bluetooth device. If the device paired before, W30 will connect automatically. If can't find paired device, W30 will enter pairing mode automatically, blue LED under pairing button flashes quickly.

1. Active "Bluetooth" function on your device and search for "Fenda W30".
Enter "0000" if your device asks for the PIN code..



2. After pairing successfully, blue LED bright, and ready for playing music.
Recommend to adjust suitable volume before playing music.



3. Answer calls / hang up

*. Short press to answer the call and short press again to hang up;
*. Long press to reject the call



Pairing a bluetooth device supporting NFC

If your Bluetooth device supports Near Field Communication (NFC), make sure that NFC feature is activated. Touch the NFC area of your Bluetooth device to back of W30 in order to automatically pairing.

Note: 1. If your phone has NFC support but it is running an OS below Android 4.1, you will need to download an NFC Bluetooth APP from Google play or a similar online store.

Specifications

Power Output: 5W=2.5W*2
Frequency Response: 80Hz-20KHz
Power: DV 5V
Separation: ≥40dB
S/N Ratio: ≥75dB
Dimension: W145*D72*H24MM