



2.1 Computer Multimedia Speaker

SHENZHEN FENDA TECHNOLOGY CO., LTD. GUANGDONG, PRC

1 Sound unwired



CAUTION! Do not place the system in the high-temp and humid environment, prevent it from raining or rough handling and strong shock.


FEATURES Seamlessly stream music from your iPad, iPhone, Android device, laptop or other Bluetooth-enabled devices. No wires means your mobile devices stay mobile.

SYSTEM COMPOSITION Subwoofer unit 1pc Plastic satellite speakers 2pcs Remote control 1pc Operation manual 1pc 3.5mm to RCA stereo cable 1pc RCA to RCA stereo cable 1pc (optional)



Sound unwired


INSTALLATION GUIDE: (See the below guiding pictures) 1. Connect the satellite speaker cable to the output port of subwoofer in respective color port

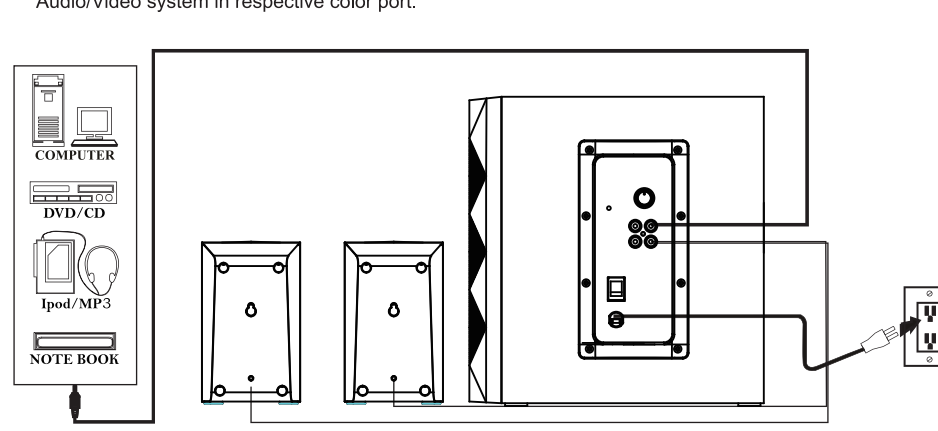

3 Sound unwired



Front panel keys

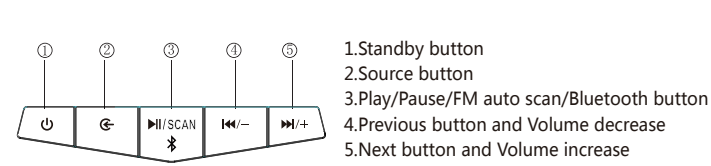

- 1 Standby button
2 Source button
3 Play/Pause/FM auto scan/Bluetooth button
4 Previous button and Volume decrease
5 Next button and Volume increase


Function of Panel keys

- A. [Mute]: Turn on/off mute.
B. [BT/USB/FM]: Switch between BT, AUX, USB and FM mode.
C. [Power]: USB Mode short press for play/pause music.
(2) FM Mode Short press to start Auto Search & this will store the found frequencies (channels) automatically



Sound unwired

- F. [M]: USB Mode: Short press to increase volume/long press to select next song.
(2) FM Mode: Short press to increase volume/long press to select next stored station.
(3) Bluetooth mode: Short press to increase volume/long press to select next song.
Remote control Remote control keys function
A. [Mute]: Turn on/off mute.
B. AUX/USB/FM: USB (or USB Mode) and FM key: short press the keys to switch to respective modes.

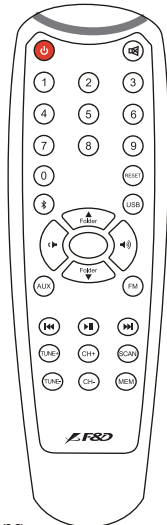

5 Sound unwired



- 2. FM source: directly press numeric keys through remote to select your favorite station if you know the station number (1-100). Or press 3 or 4 digits of frequency to play that station, for example, 102.6 for 102.6 MHz station.
K. Play/Pause: USB and BT source, short press to play or pause.
L. Prev: USB and BT source, short press to select previous song.



Sound unwired

Specifications Output power(RMS): 14W+14WX2 Speaker unit: Full Range Speaker: 3", Subwoofer: 5.25" Frequency response: 150Hz-17KHz Subwoofer: 35Hz-117Hz Satellite: 170Hz-20KHz Power supply: 220-240V~50/60Hz 0.3A

Table with 3 columns: Problem, Possible Cause, Solution. Includes troubleshooting steps for power, volume, and connection issues.

7




Указания по безопасной эксплуатации

- Важно! Прочитайте внимательно! Не допускайте использования адаптера питания, не выходящего из комплект поставки Ваших колонок.
Столкнувшись с проблемами, связанными с работой колонки, попробуйте следующие действия:
1. Проверьте подключение кабелей питания и кабелей аудио к колонкам.
2. Проверьте подключение кабелей питания и кабелей аудио к колонкам.
3. Проверьте подключение кабелей питания и кабелей аудио к колонкам.




8

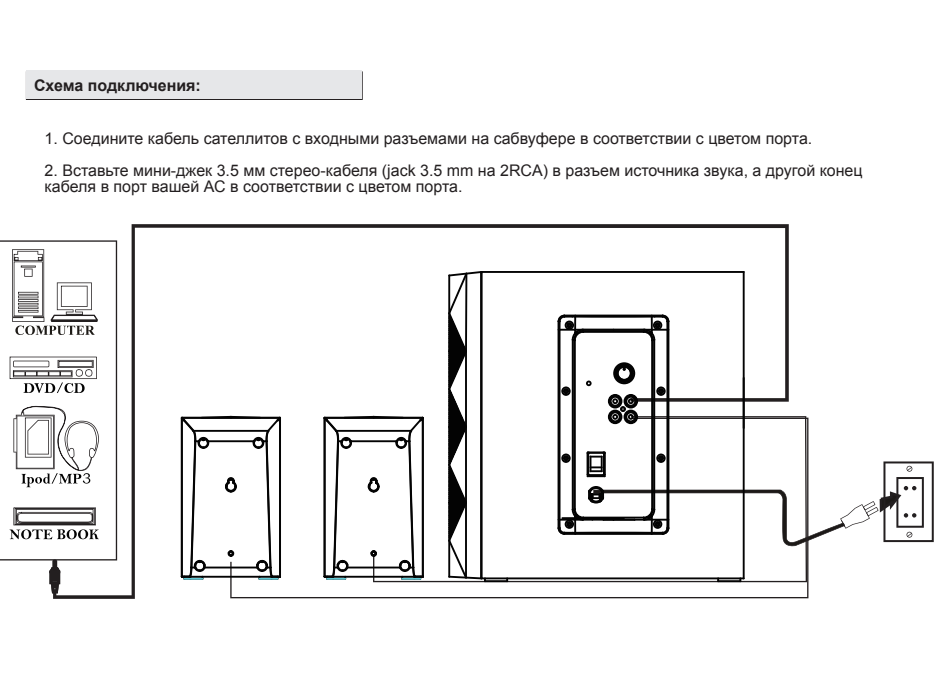

9



Панель управления

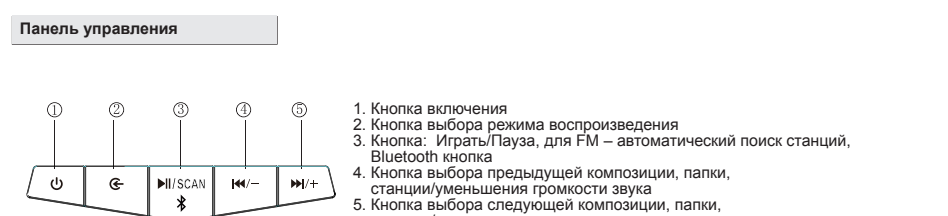

- 1. Кнопка включения.
2. Кнопка выбора режима воспроизведения.
3. Кнопка: 'Пауза/Стоп', для FM - автоматический поиск станций.
4. Кнопка: 'Предыдущий/Следующий', переключает каналы, увеличивает/уменьшает громкость звука.
5. Кнопка: 'Выход/Выключение', переключает каналы, увеличивает/уменьшает громкость звука.



10

- F. [M] (1) USB режим: короткое нажатие увеличивает громкость, длительное нажатие выдает следующую композицию.
(2) в FM режиме: короткое нажатие выдает сохраненную станцию, долгое нажатие выдает следующую композицию.
Дистанционное управление
Функции пульта дистанционного управления
A. [Mute]: ВКЛ/ВЫКЛ аудиосистемы.
B. AUX/USB/FM: - режим линейного входа, Bluetooth - режим, USB - режим, FM - режим: короткое нажатие на кнопку переключает соответствующий режим.

11



J. 0-9 номера кнопок: a. USB источник: непосредственный ввод номера с пульта ДУ выдает любимую композицию, если вы знаете номер композиции в палке. Система будет автоматически проигрывать последнюю композицию в палке, если вы выбрали номер трека, которого нет в этой палке.
K. Play/Pause: USB/BT источник: при коротком нажатии, переходит к предыдущей композиции.
L. Prev: USB/BT источник: при коротком нажатии, переходит к предыдущей композиции.
M. Next: USB/BT источник: при коротком нажатии, переходит к следующей/следующей палке.
N. Folder [M]: USB источник: при коротком нажатии переходит к предыдущей/следующей палке.
O. короткое нажатие приводит к сбросу настроек.



12

Technical specifications table and troubleshooting table. Includes model number A180XE131900001 and a QR code.

F8D WARRANTY CARD

END-USER'S COPY WARRANTY REGISTRATION CERTIFICATE

Warranty registration form fields: Mr./Mrs/Ms First Name, Last Name, Address, Contact No., Product Name, Model No., Serial No., Date Purchased, Invoice No., Retail Outlet Where Purchased.

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F8D product within the warranty period from its date of purchase from our Authorised Dealer.

F8D WARRANTY CARD

DISTRIBUTOR'S COPY WARRANTY REGISTRATION CERTIFICATE

Distributor warranty registration form fields: Mr./Mrs/Ms First Name, Last Name, Address, Contact No., Product Name, Model No., Serial No., Date Purchased, Invoice No., Retail Outlet Where Purchased.

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F8D product within the warranty period from its date of purchase from our Authorised Dealer.

Product specifications table: 展开尺寸 290X110MM, 成型尺寸 145X110MM, 材质要求 128G铜板纸, 印刷要求 单票印刷, 工艺要求 书钉, 页码数(页) 10页

Order information table: 品牌 F8D, 时间 20160118, 订单号, 业务下单, 公司型号 A180X, 客户型号 A180X, 设计内容 说明书, 料号 17.7.030.0963, 电子 电声结构, 项目经理, 设计者 杨改改, 标准化, PLM编号, 复核 业务, 核准